

# Operating the "08-Series" Wall Mounted Tables and Benches

## ⚠ WARNING

These tables and benches are to be operated by trained adults only. If you were not trained to operate these units **DO NOT USE THEM**. For training and service contact installing dealer or Mitchell Furniture Systems.

Use of these units by unauthorized personnel and/or children could result in serious injury!

Do not leave children unattended in the area near tables and benches whether in use or stored.

Do not attempt to repair damaged product yourself. Contact installing dealer or Mitchell Furniture Systems.

### Bench Setup:



2) Use the **release handle** to release **storage lock** and pull out bottom of bench.



3) Keep both hands on bench while pulling out with lower hand and stabilizing bench with upper hand. **Do not pull down from top of bench!**



4) When unit is stable in the 'tee-pee' position face side of bench placing a hand on each leaf top. **Check that automatic down lock is engaged!**

### Unlocking Storage System:



Insert key to unlock the **center post lock** on both sides of table.

### Table Setup:



2) Use the **release handle** to release **storage lock** and pull out bottom of table.



3) Keep both hands on table while pulling out with lower hand and stabilizing table with upper hand. **Do not pull down from top of table!**



4) When unit is stable in the 'tee-pee' position face side of table placing a hand on each leaf top. Gently push down to floor. **Check that automatic down lock is engaged.**

### Storing Tables and Benches:



1) (Tables) **Track arm pins must engage in post tracks before folding!** See below. Face side of the table. Lift under outer leaf top while lifting up down lock handle in between leaves. Raise to 'tee-pee' position.



1) (Benches) **Track arm pins must engage in post tracks before folding!** See below. Face side of the bench. Lift under outer leaf top while lifting up down lock handle in between leaves. Raise to 'tee-pee' position.



2) When unit is stable in the 'tee-pee' position face the cabinet. Push unit toward cabinet with lower hand while stabilizing with other hand until top engages with cabinet top locks.



3) Pushing with both hands will roll unit into cabinet thus locking automatic storage lock. The center post lock can be manually locked once units are stored into cabinet.

### Removing Tables and Benches From Cabinet:

**DO NOT unlock track arm pins in the open flat position!** Reach between gap between inner leaf and cabinet (or stored unit) to release the spring loaded track arm pin (2 per unit). The table or bench can move around the room from the sides or ends. **Do not fold unit if NOT engaged into cabinet!**



### Returning Tables/Benches to Cabinet Before Storage:

**DO NOT engage track arm pins in the open flat position!** Re align the unit with cabinet pocket. Push the unit far enough into the pocket so end of inner leaf is inside the posts. Release the spring loaded track arm pins. Push in slightly to hear track arm pins engage. **Pull back on unit to be sure pins engaged.**



### Servicing Dealer:


Phone:



# "08-Series" Wall Mounted Table and Bench Components


## STORAGE CABINET COMPONENTS:

### Center Post Locks

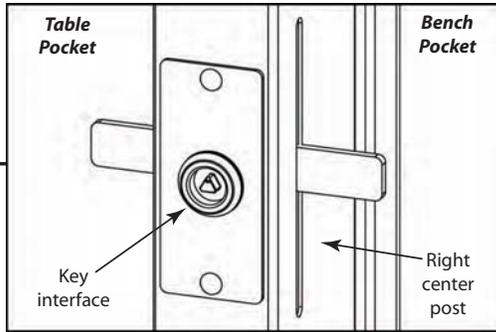


Manually secure tables and benches into **storage cabinet** thus preventing unauthorized use.

### Double Top Locks

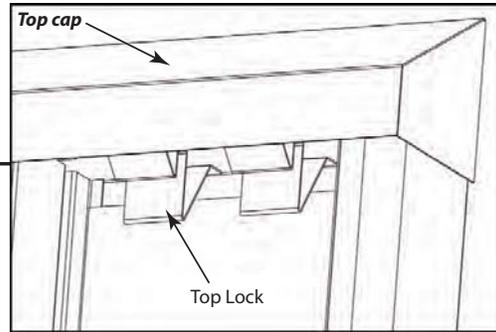


Automatically locks tables and benches to the top of cabinet pocket during storage. There are (2) locks per each table and bench pocket.

### Post Tracks and Bench Stops

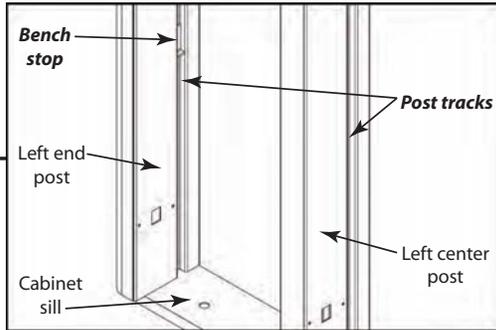

Post tracks capture **track arm pins** securing inner table and bench leaves to **storage cabinet**. **Bench stops** prevent accidental bench tipping when benches are attached to **storage cabinet**.


### Storage Lock Release Handle

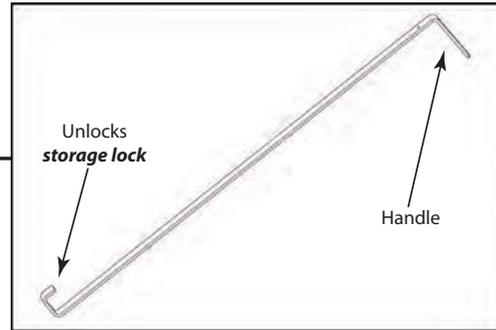

Releases **storage lock** centered at the bottom of tables and benches when in **storage cabinet**. **To unlock:** Insert under unit at the center of leaf and tilt handle away from cabinet.


## TABLE AND BENCH COMPONENTS:

### Storage Lock

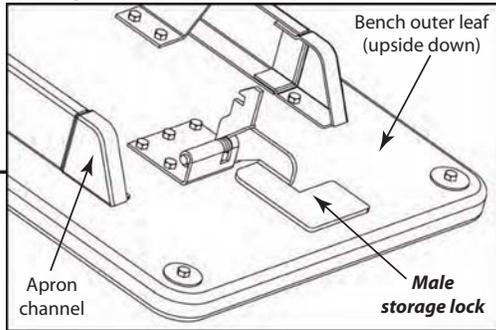


Leaf to leaf **storage lock** automatically engages when table or bench is pushed into **storage cabinet**. Manual unlock with hand or **release handle**. The release is located at the bottom of the outer leaf when in the **storage cabinet**.

### Automatic Down Lock

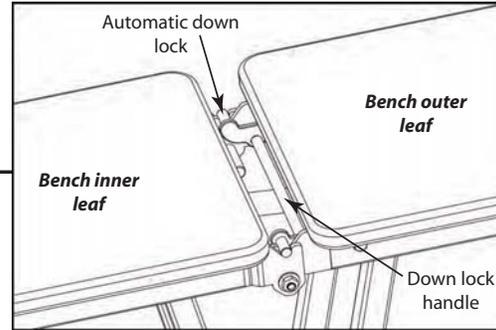

**Down lock** automatically engages when table and bench are lowered to floor to prevent accidental tip up. **Bench design does not 'jackknife' if tipped onto its side.** Manual disengage by lifting up on lock bar and outer leaf when returning to **storage cabinet**.

### Track Arm Pins

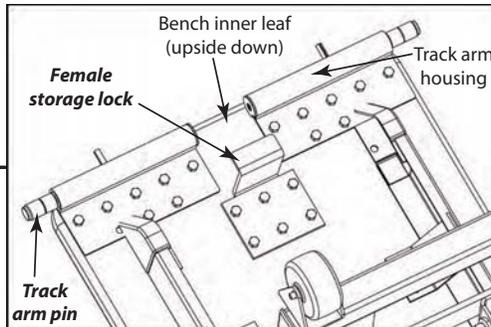

Secure the table and bench inner leaves to cabinet **post tracks** for storage. Spring loaded manual pin extends for storage and retracts for removal from **storage cabinet**.